


***Model Eclipse®
Illustrated Installation
Instructions***



Quality.

"We Set The Standard."

Illustrated Parts Breakdown (IPB)

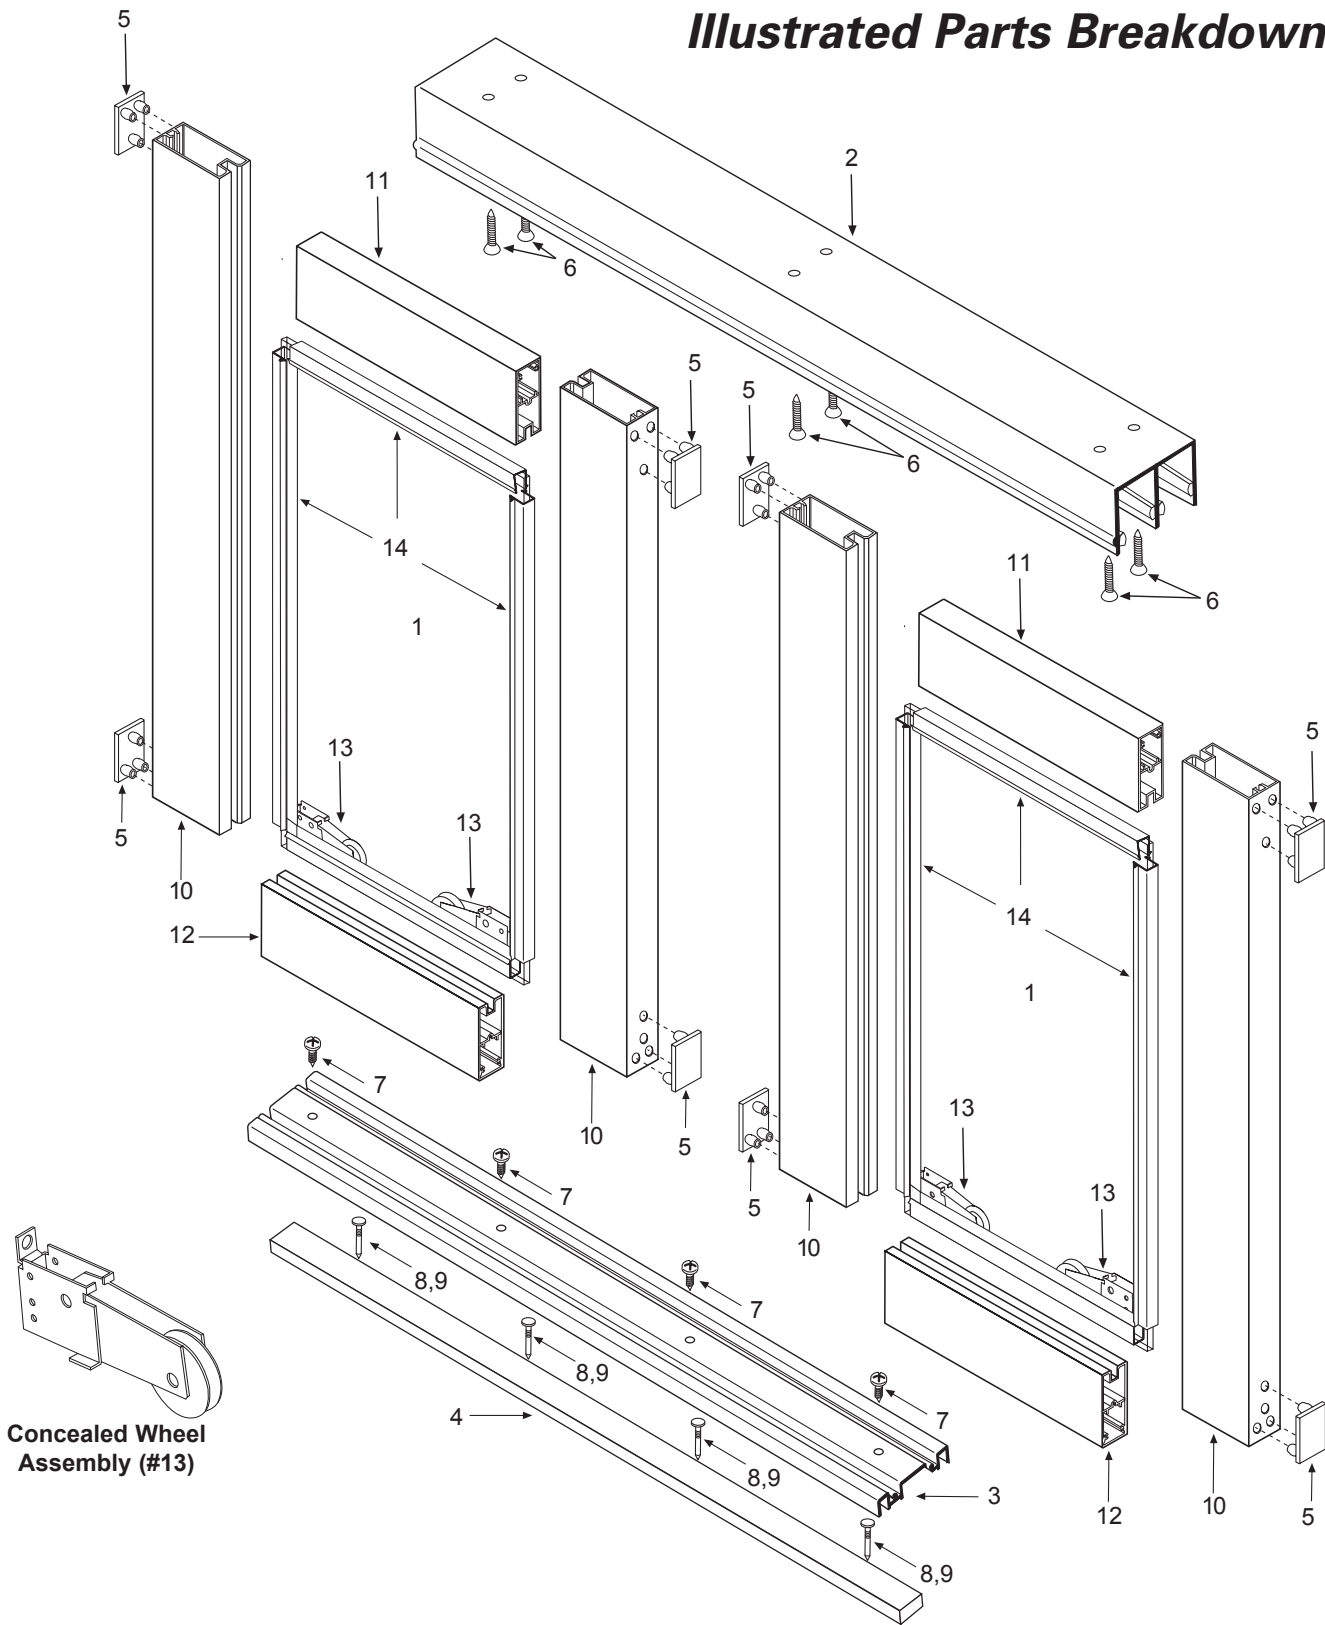

Concealed Wheel Assembly (#13)

NO.	QTY	PART #
#1	2	
#2	1	A1012
#3	1	A2020
#4	1	W0101
#5	8	C1090
#6	6	S0095
#7	4	S0060
#8	4	N2030





PART DESCRIPTION
Door Panels
Ultraglide® Top Channel with Felt Liner
Bottom Track
Wood Strip
Bumper
#8 x 1-1/2" PH SMS Screw
#8 x 1/2" Truss Screw
Concrete Nail

NO.	QTY	PART #
#9	4	N1030
#10	4	A4850
#11	2	A3950
#12	2	A3950
#13	4	W8015
#14	2	G2120

PART DESCRIPTION
5 Penny Nail
Side Mold
Top Mold
Bottom Mold
Concealed Wheel Assembly
Glazing Vinyl

Congratulations on purchasing your new Cw® Wardrobe Doors. Now that you have opened the package, we want you to verify that you have all the necessary hardware supplied with your doors.

PARTS CHECK LIST:

No.	Qty	Part Description
#1	2	Door Panels
#2	1	Ultraglide® Top Channel with Felt Liner
#3	1	Bottom Track
#4	1	Wood Strip (located inside of Track)
#5	8	Bumper
#6	6	#8 x 1-1/2" PH SMS Screws: 
#7	4	#8 x 1/2" Truss Screws: 
#8	4	Concrete Nails: 
#9	4	5 Penny Nails: 

If you find any parts that are damaged or missing, refer to the Parts Check List and IPB Drawing and contact Contractors Wardrobe®'s Customer Service Department at 661.257.1177.

TOOL CHECK LIST:

You will need:

- Phillips Screwdriver
- Tape Measure
- Hammer
- Pencil
- 3/8" Drill Motor and 3/16" and 1/8" Drill Bit (use Masonry Bit if drilling into concrete or ceramic flooring)
- Miter Box and 24-Tooth Hacksaw Blade
- Square
- Glass Cutter for optional Mirror Fascia
- Four 1" Screws and Screw Anchors (For ceramic tile floors only, see Floor Check List #5.)
- Adhesive (Floor must be clean) (For concrete and ceramic tile floors, see Floor Check List #3 and #5.)
- Center Punch if drilling into concrete or ceramic flooring.

FLOOR CHECK LIST


- 1. Do you have carpet?**
It is highly recommended that if you have carpet and do not have a cut-out in the carpet already, you should cut the carpet in order to install the Bottom Track (#3) directly to the floor. Use a utility blade to make a straight cut. We do not recommend installing the Bottom Track (#3) directly on top of carpet.
- 2. Do you have a concrete, wood floor or ceramic tile floor?**
 - A. If it is a concrete floor, go to 3...
 - B. If it is a wood floor, go to 4...
 - C. If it is a ceramic tile floor, go to 5...
- 3. If you have a concrete floor you will:** Use Concrete Nails (#8) to attach Wood Strip (#4) to floor or, you may glue the Wood Strip (#4) down with wood or concrete adhesive.
- 4. If you have a wood floor you will:** Use 5 Penny Nails (#9) to attach Wood Strip (#4) to wood floor (Score with center punch).
- 5. If you have a ceramic floor you will:** Score with center punch then drill holes with a 3/16" masonry drill bit. Insert screw anchors and attach Wood Strip (#4) to floor with screws, or you may glue the Wood Strip (#4) down with panel adhesive.

NOTE: Drill bit, screws, screw anchors and adhesive are not supplied.

TRACK OFFSET MEASUREMENTS FROM FACE OF OPENING TO FRONT EDGE OF TRACK

Track Offset	A	B
All Ultraglide® Track and Channel Eclipse® doors	1/2"	1-1/2"

For Optional Mirror Fascia, add 1/4" to the Bottom Track offset measurement.

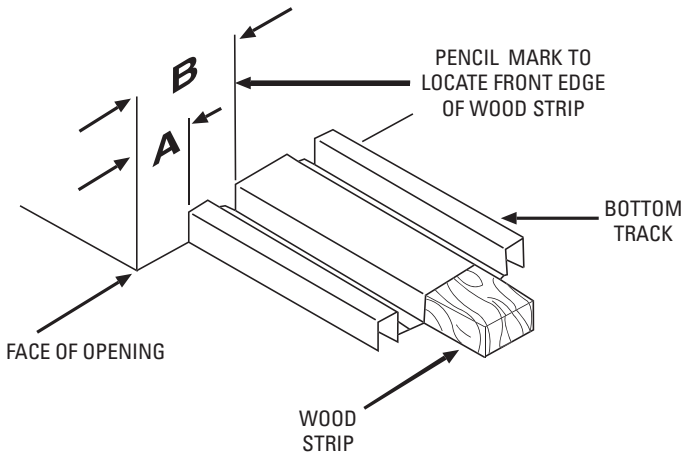

INSTALLING THE DOORS

STEP 1 Removing Existing Wardrobe Doors

Remove existing doors, brackets, top channel and bottom track.

STEP 2 Installing the Top Channel

- A. Measure the opening at the top of the closet from wall to wall.
- B. Cut the new Ultraglide® Top Channel (#2) to this dimension. When cutting the Top Channel (#2) we recommend that you use a miter box and hacksaw for straight cut. Cut one (1) side only.

NOTE: If your closet has bumper jambs you may need to notch your Top Channel (#2) on each end.

- C. When cut to proper length, install Top Channel (#2) up to the top front of closet opening making sure that the front of the Top Channel (#2) is flush with outside walls (See Figure 1). Hold up to the Top Channel (#2) in the desired position and with your pencil, mark where the pre-drilled holes are in the Top Channel (#2).

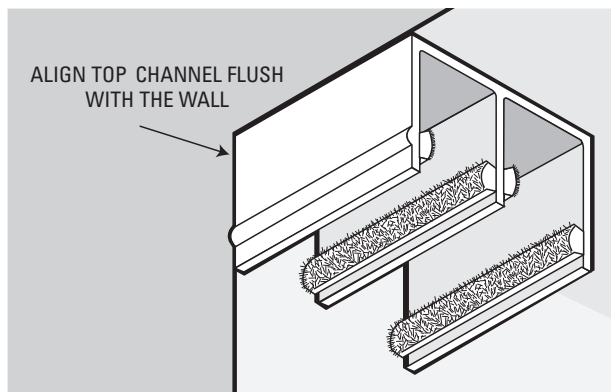


Figure 1

- D. Remove the Top Channel (#2) and drill holes using a 1/8" drill bit where you made the pencil marks. Now install the Top Channel (#2) in place using six (6) #8 x 1-1/2" PH SMS Screws (#6). If installing into concrete ceiling use 3/16" masonry screw anchors.

STEP 3 Installing the Bottom Track

- A. Make sure that you have used the FLOOR CHECK LIST to determine which floor and installation you will use.

NOTE: If the floor board molding continues into the closet opening, you may need to remove it so that the Wardrobe Doors will close flush to the wall.

- B. Locate Wood Strip (#4) supplied in kit and measure inside bottom closet opening and cut to length.
- C. Find the correct offset measurement using the **Offset Measuring Table** on Page 3 (B Measurement) for your particular installation. From the front edge of closet opening inward, measure using dimension from table and make a pencil mark on wall. Do this on both walls, i.e., right and left walls (See Figure 2).

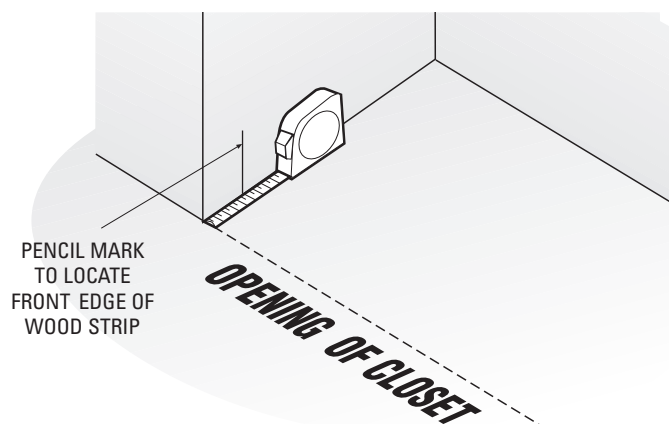


Figure 2

- D. Place front of Wood Strip (#4) up to pencil mark on wall (See Figure 3). Do this on both sides. Now attach Wood Strip (#4) according to your **Offset Measuring Table**.
- E. Cut the Bottom Track (#3) to your measurement of the inside closet opening. Slide the Bottom Track (#3) over Wood Strip (#4) and attach with four (4) #8 x 1/2" Truss Screws (#7).

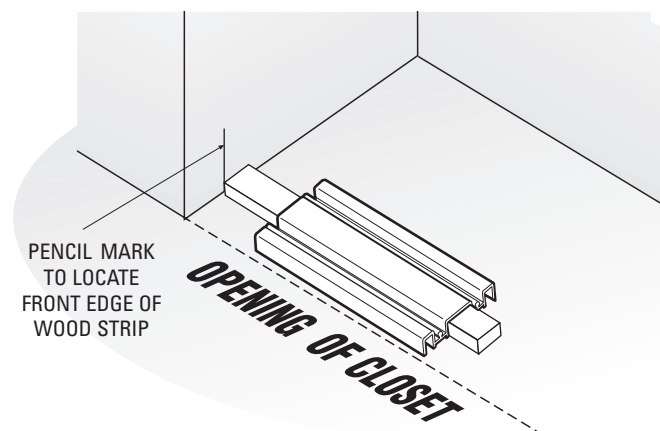


Figure 3

STEP 4 Installing the Door Panels

- A. Make sure you have a pad or blanket to protect the Door Panels (#1) from being scratched. Lay Door Panels (#1) on their side. Locate one of the Concealed Wheel Assemblies (#13) on the side of a Door Panel (#1). With a phillips screwdriver, turn the adjusting screw to the right to lower the roller. Do this until you have 1" of roller showing. Adjust both Concealed Wheel Assemblies (#13) on each Door Panel (#1) (This will avoid scratching the Bottom Track (#3) when installing the Door Panels (#1)).
- B. Pick up one (1) Door Panel (#1) and, with the textured glass facing you, tilt the top of the Door Panel (#1) back and slip the Door Panel (#1) into the back runner of the Top Channel (#2). Next, set the bottom of the Door Panel (#1) into the back runner of the Bottom Track (#3).
- C. For the front Door Panel (#1), repeat B, but place the Door Panel (#1) into the front runner of the Top Channel (#2) and front runner of the Bottom Track (#3).

STEP 5 Adjusting the Door Panels

Slide the front Door Panel (#1) so it is closest to the room's entrance door (This is how the Wardrobe Doors will be in position to look their best). Look at the space between the door edge and the wall. You want the door edge and the wall to be flush. If you see space at the top or bottom edge of the Door Panel (#1), turn the adjusting screw on top of the Concealed Wheel Assembly (#13) on the lower side of the Door Panel (#1) nearest the wall. Turn the screw left or right until Door Panel (#1) aligns flush with the wall (See Figure 4). Repeat for each Door Panel (#1).

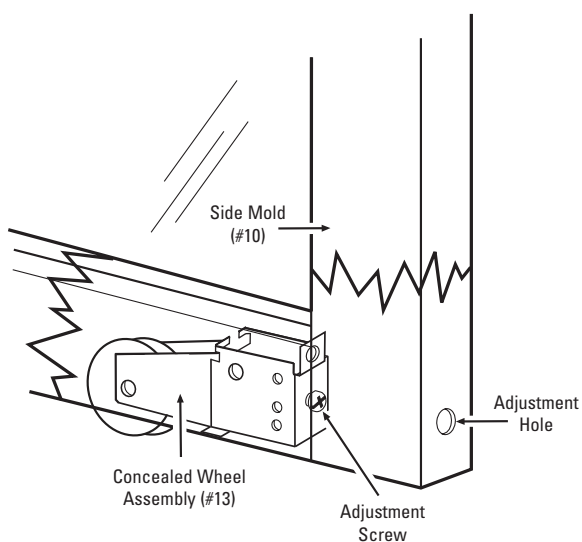


Figure 4

STEP 6 Installing the Bumpers

Peel the paper off the back of the Bumpers (#5). The Bumpers (#5) will cushion and protect the door and wall when you close the Wardrobe Door (See Figure 5).

Insert top and bottom Bumpers (#5) by aligning the holes and firmly pressing them into place.

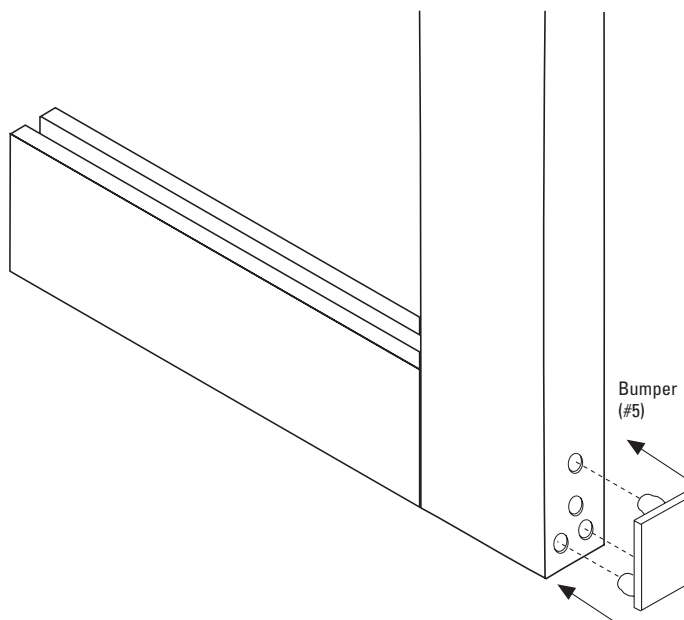


Figure 5

Thank you for purchasing a Cw® Wardrobe Door. If you like this product, we invite you to visit our website at www.CwDoor.com for more information about our extensive line of other Wardrobe Doors, Room Partitions and Loft Dividers, Cabinet Doors and Shower Enclosures. They feature Duratuf® Tempered Safety Glass, Painted Glass, CwShield™ Protective Coating and Duraflect® Copper-Free Mirror.